

Options



Wireless Card & Antenna Kit
802.11b/g wireless



USB Device Card
Provides USB interface to PC.



Watertight Gland
Ethernet or USB

Light Stack
Provides extra visibility to operator or supervisor.
Mounts neatly inside column with the aid of the external OPTO22 relay box. (AC operation only)



IP69K External Battery Pack
Mounts neatly inside column.
Toggle on/off. Rechargeable.
Provides 16 hours operation.

External Relay Box
Mounts neatly inside column.
Holds up to 3 OPTO22 relays.



More online

www.wtxweb.com/zq375

- › Technical specifications
- › User manuals
- › Breaking information